



IMPORTANT! READ THESE INSTRUCTIONS FIRST.

Before you begin building your kit, read the instructions and study the illustrations carefully. Test fit the parts before cementing them together, to acquaint yourself with their proper location. It is best to cut the parts from the "runners" with a modelers knife instead of twisting them off. Cut the parts only as they're needed. Only paint and cement made for styrene should be used. Trim

off excess plastic or "flash". The plating should be scraped from chromed parts where they are to be cemented. Use cement sparingly. Apply cement to small parts with a toothpick. When painting your model it is best to cement all non-chromed parts to the body and paint the whole unit at one time.



STEP NUMBER FOR CHROMED PARTS

STEP NUMBERS FOR NON-CHROMED PARTS (10)

PART NUMBERS

CEMENT -----

DO NOT CEMENT —


CLEAR

PLASTIC PARTS

RED CLEAR

PLASTIC PARTS RED CLEAR

CLEAR

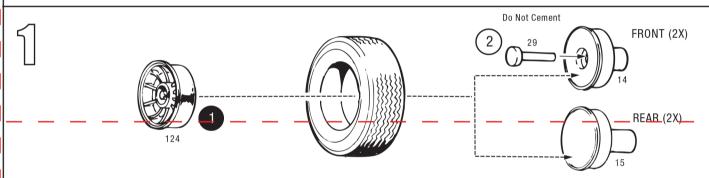



NOTE: For ease of applying your decals, they are separated on the sheet. For the experienced modeler, you may still use a modelers knife and cut close to the image, and for the novice you can cut them apart with scissors.



