



Before you begin building, look over the instructions carefully and test fit parts without cementing. Remove small parts from 'runners' with a modeler's knife, do not twist them off.

MPC kits are made of the highest quality styrene plastic.

Use only paint and cement made for styrene. Be sure that cement is used sparingly.

Trim off excess plastic or 'flash' and scrape plating from chromed parts before joining.

Follow the instructions carefully. The parts are numbered in their assembly order.




Chrome





Black





Body Color

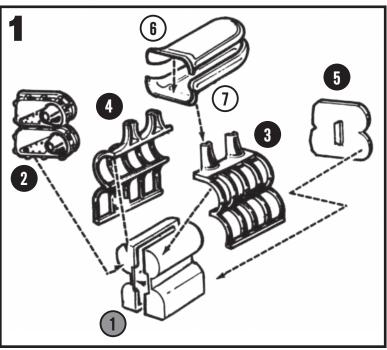


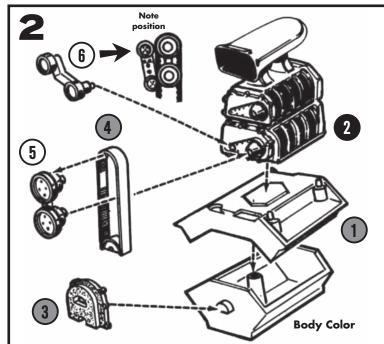


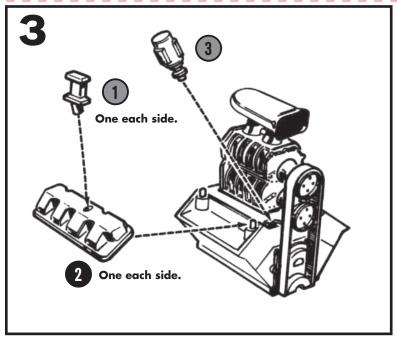


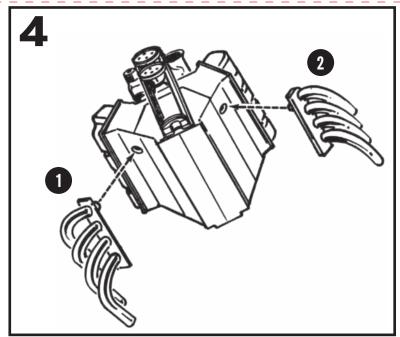


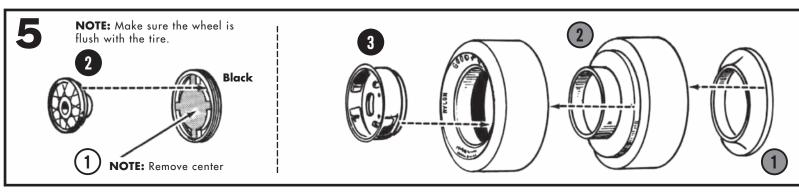


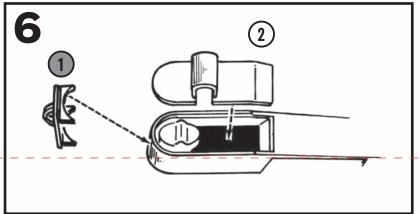


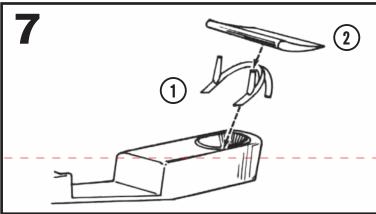

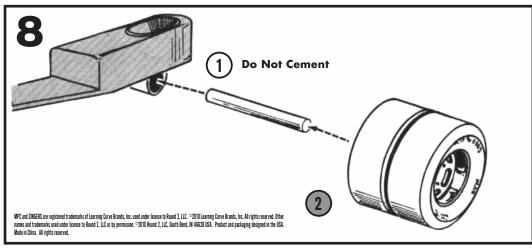

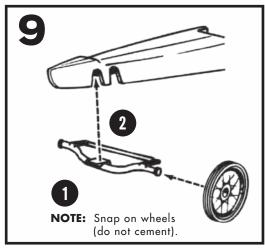

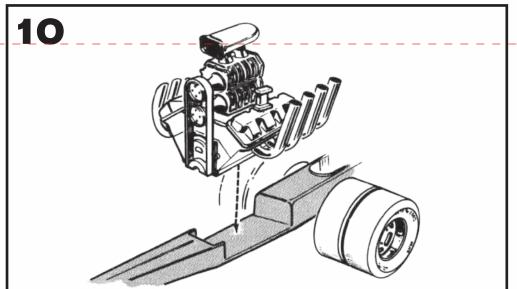



Steve Tansy, another well known custom car designer, was commissioned to build 1:1 versions of the Super Dune and Super Drag ZINGERS. These wild "models brought to life", with their half-scale bodies, received wide magazine coverage and toured the country with great interest and excitement following them everywhere they went:

Now, after a 30 year absence, MPC's ZINGERS are back! They are icons of model car history and are just as much fun to build and collect today!

