

## IMPORTANT !

Before assembling model, study sketch carefully.

Important - Apply cement to inside surfaces only. Avoid getting cement on outer surfaces of model sections. Use cement very sparingly and avoid getting cement on hands, so as not to mar or smear plastic surfaces. Do not hurry. Work carefully and patiently.

Important Note: Before proceeding to cement parts together, it is advisable to fit parts together dry (without cement) so that you may familiarize yourself with the parts and how they go together, also noting the points where cement is to be applied.

For best results assemble model exactly in the order indicated.


**Note: Remove flash from all parts.**




**NOTE:** If choosing to use the soft PVC arms with inner wires, cyanoacrylate (super glue) or epoxy will be required to hold the arm parts together.

**JIG FIXTURE**

Insert wire here and bend around.

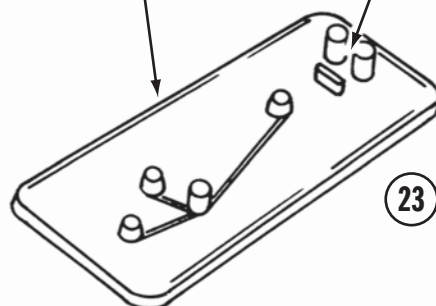


**WIRE IS OPTIONAL**

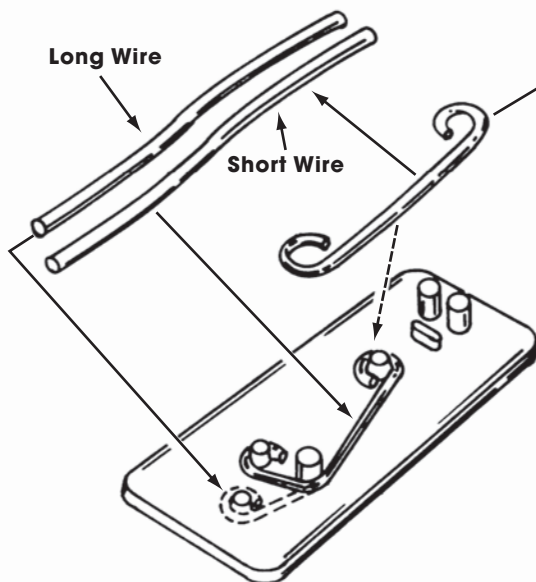


**NOTE:** for best results, bend one end of wire first. Place the bent end in the jig and bend as directed then cut to length.

**HEAD**

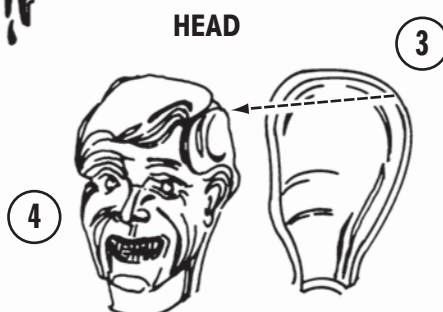


★ **SOFT PVC OPTION**

**LEFT ARM**

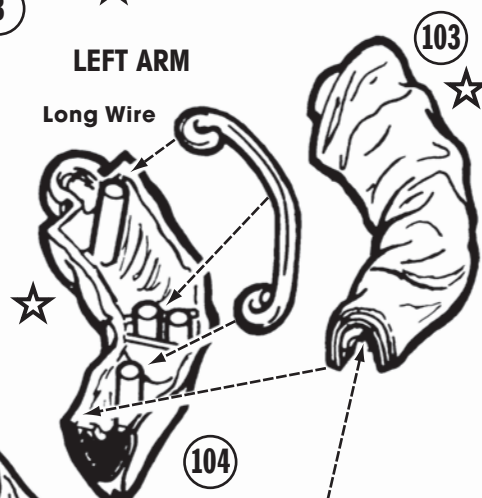

**RIGHT ARM**

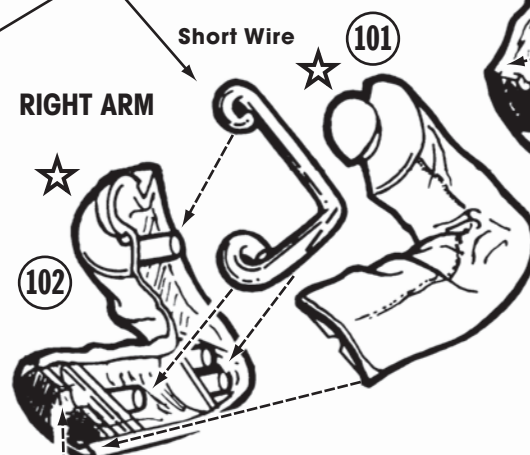

**RIGHT HAND**

14




**LEFT HAND**

13



**NOTE:** Use either luminous plastic parts or body color.

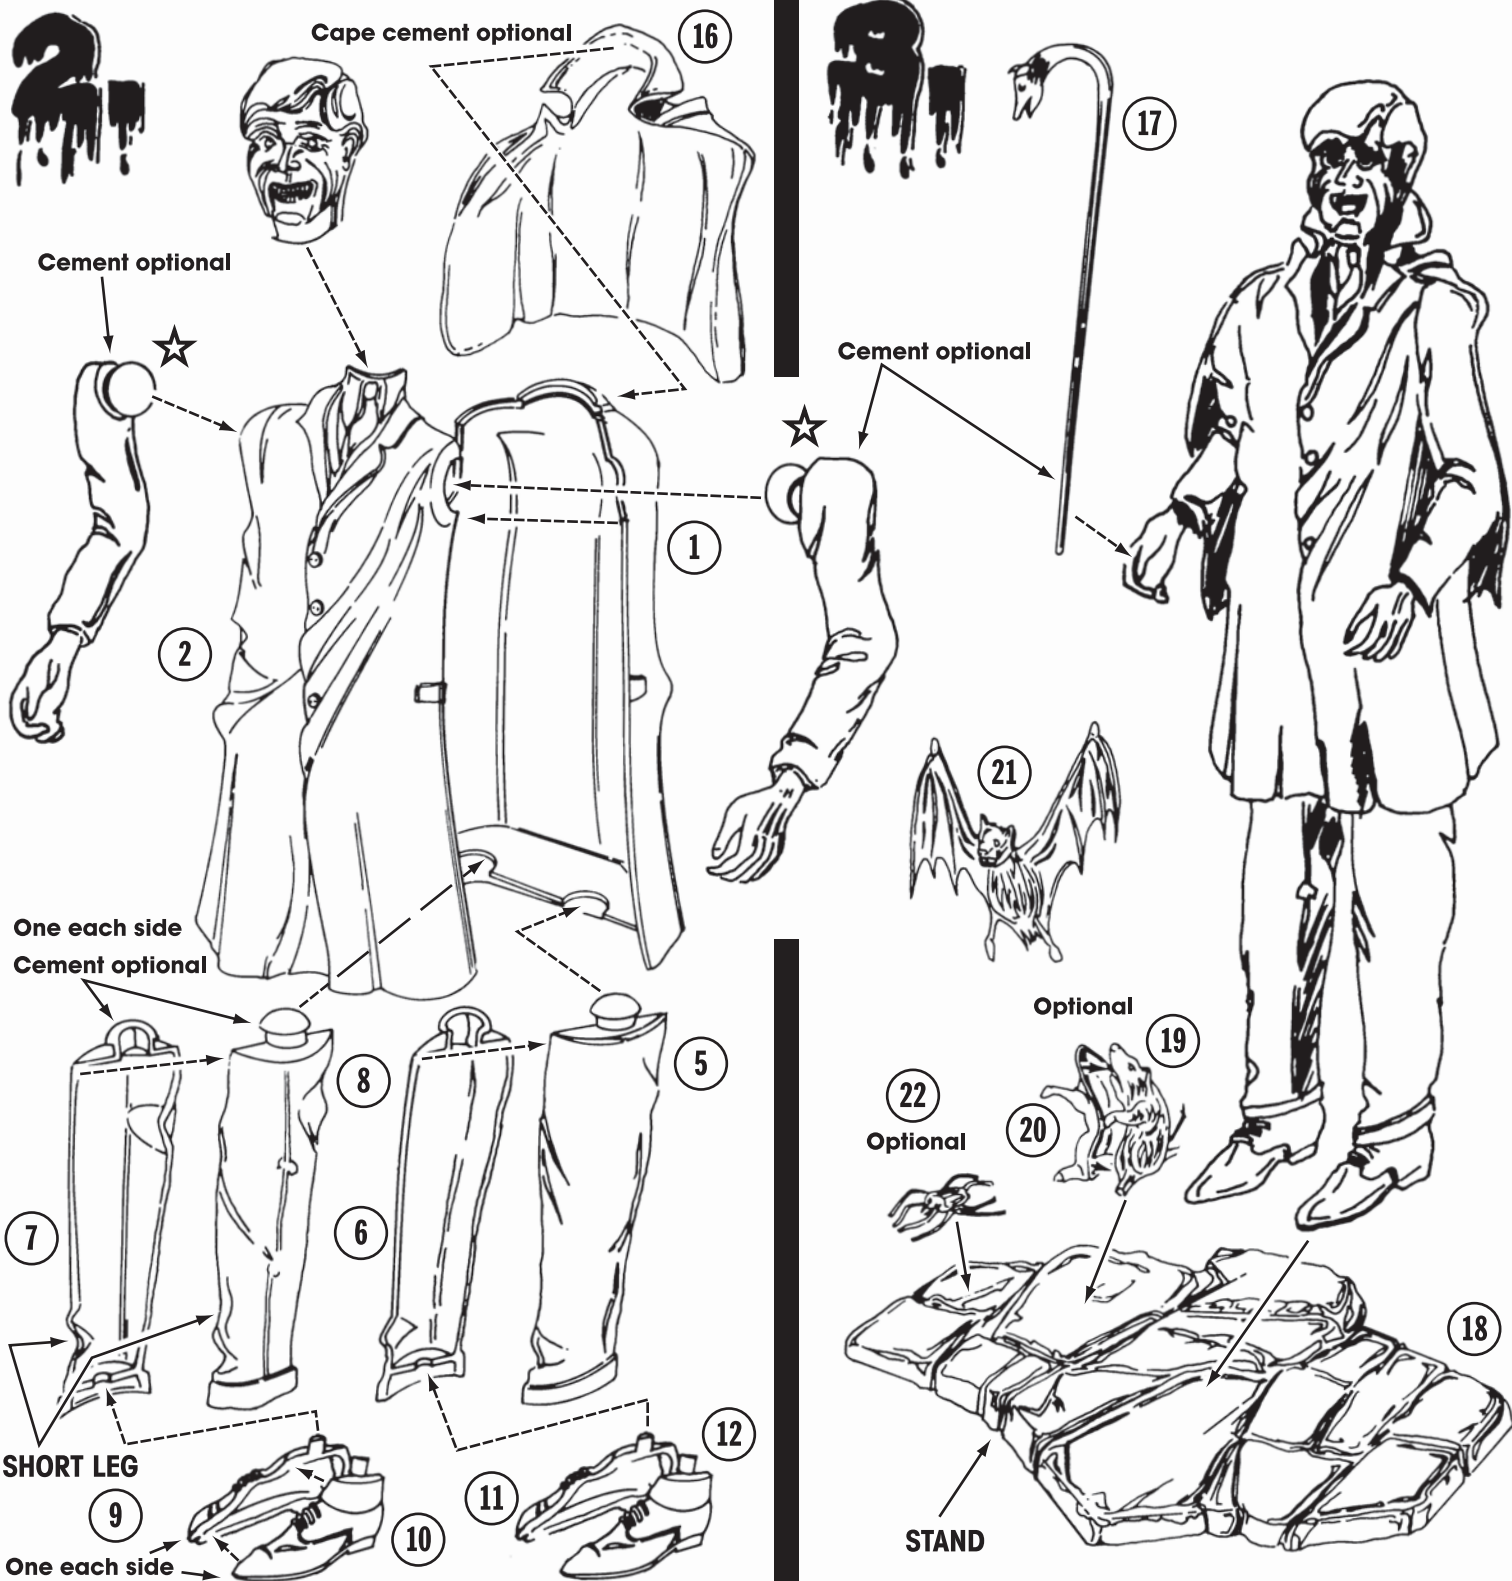

# IS BARNABAS YOUR BAG?

LOOK FOR OTHER GREAT MPC

## DARK SHADOWS KITS.

GET 'EM ALL FROM YOUR LOCAL HOBBY SHOP.

WEREWOLF FIGURE  
MPC578/12



VAMPIRE VAN  
MPC763/12

