





# STEP 2.

Cement hinge to seat back only. Do not get cement on pin on seat or seat back will not tilt back. Seat back can be cemented upright if desired.

NOTE: You may use either the tilt-away seats or racing seats.

PAINTING NOTES: Paint interior and accessories semi-gloss black except where noted. Paint face of dashboard and console a wood grain texture. Paint recessed areas of gauge faces black, wipe off raised areas. Paint all trim and door handles chrome (bright silver).

NOTE: Shoulder straps may also be used with stock seats for the drag version.

Use without console

## STEP 4.

Front wheel assembly must be assembled with care. Cement front brake disc (1) and (5) to Spindles (2) and (6), (be sure holes line up). Allow cement to dry. Slide axle pins (3) and (7) through spindles and into wheels (4) and (8). Cement carefully. Wheels should turn freely.

Front sway bar and arms

Assembled left front axle

(Cement here only)

1

36

(Cement here only)

(No point)

2 34

3 35

7 35 (No paint)

6 34

5 36

8 63

(Cement here only)

Tie bar 31


12

Snap in place, do not cement.

Assembled right front axle

Cement front sway bar and arms assembly (9) in position on frame and allow time for cement to dry. When cement is dry, place assembled front wheels (10) and (11) in position. DO NOT CEMENT. Snap tie bar (12) over pin on spindles.

## STEP 5.

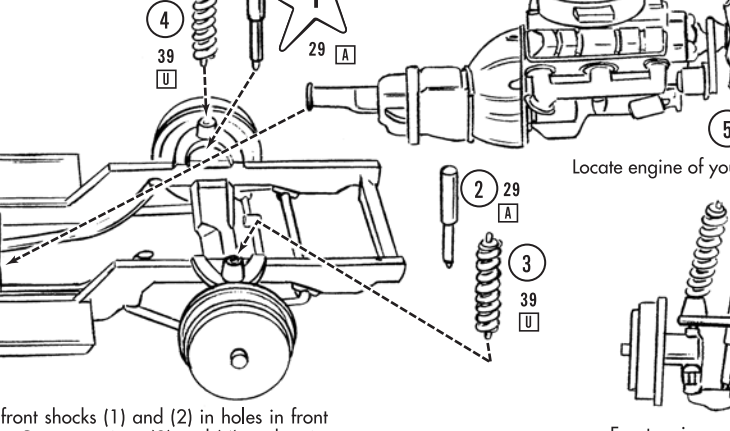

1 29 A

2 29 A

3 39 U

4 39 U

5

Locate engine of your choice.

Front springs and shocks shown in position.

Cement front shocks (1) and (2) in holes in front sway bar. Cement springs (3) and (4) to chassis. Top of shocks and spring will be located to outside of engine compartment in a later assembly.

**STEP 7.**

(One each side)

2

1

116

Allow time for cement to dry.

## STEP 6.

### STOCK CUSTOM SALT FLAT

**1**

38 I

(No paint on pin)

2 61 A

3 37

(No paint)

4 116

5

**OPTIONAL PAINTING NOTE:** Paint recessed area white or medium blue if desired.

Assemble rear wheels as shown and allow cement to dry. Slide hollow tire over assembled wheel.

(No part number)

A

**DRAG**

Locate shocks

**STEP 8.**

(Body interior)

NOTE: For drag, trim here for slicks.

(Engine compartment)

(Exterior of engine compartment)

(Clear)

Assemble engine compartment and cement radiator wall in body. Cement radiator wall in body.

Locate this end to intake manifold after body is located to chassis.

(See Completion Assemblies for details)