



IMPORTANT: READ THIS FIRST!

Before you begin building, look over the instructions carefully. Following the procedure given, test-fit parts together without cementing. This way you will be more familiar with the location of parts when it becomes time to use cement.

For removing small parts from the "runners" it is best to use a modelers knife, do not attempt to "twist" them off.

The highest quality styrene plastic goes into the making of each MPC model. Only paint and cement made for styrene should be used. Before

joining parts, trim off excess plastic or "flash." Scrape plating from chromed parts where they are to be joined with other parts. Be careful not to get cement on exposed areas. To join parts, use cement sparingly. Apply cement to very small parts with a toothpick.

When painting your model it is best to cement all non-chrome accessories to the body and paint the whole unit at one time.


You should have no trouble assembling your kit if the instructions are followed properly.


2 ASSEMBLY NUMBERS





PART NUMBER


CEMENT ----≻ DO NOT CEMENT

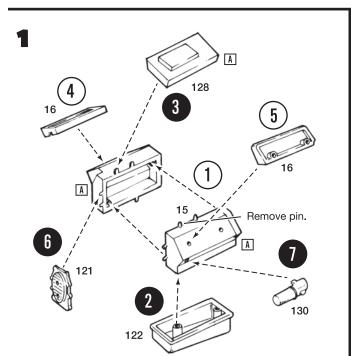

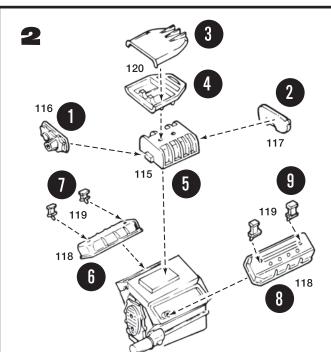

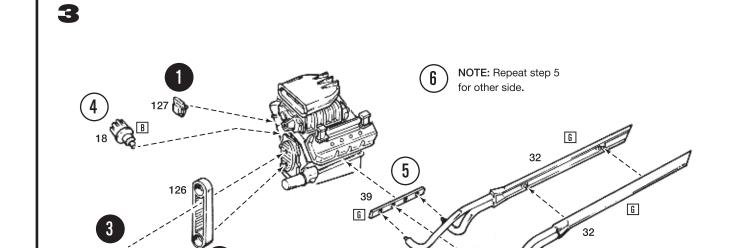

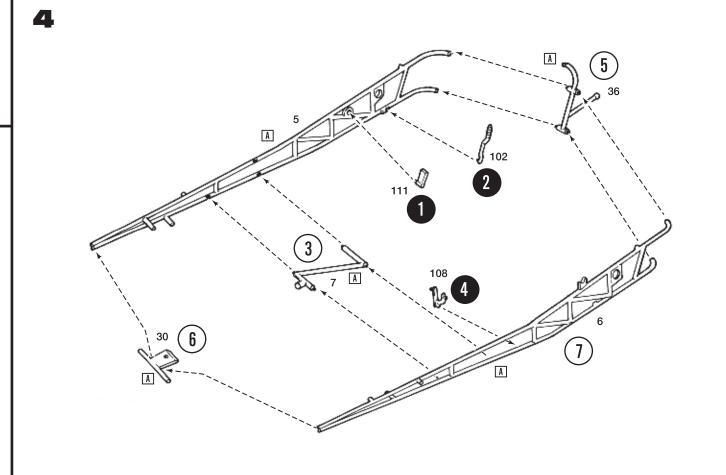

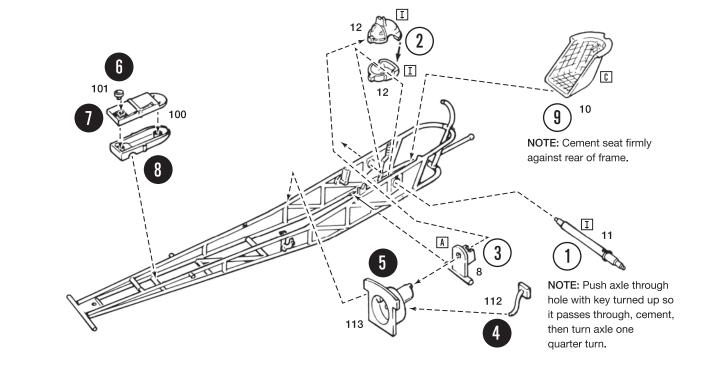

5

NOTE: Exhaust headers shown for placement only. Assemble

in Assembly 11.

