



GENERAL ASSEMBLY:

This highly detailed kit features precision-tooled parts for ease of assembly, but care and patience must be exercised to achieve optimal results. It is recommended that the builder examine the instructions carefully and do a dry test fit of parts before applying liquid cement. You will find this very helpful, as it will allow you to gain a clear understanding of how the parts fit together in order to best plan painting and final assembly.

SUB-ASSEMBLIES: Note that this kit should be built in sub-assemblies. This makes building the kit far more manageable. It is very important to note that it is extremely advantageous to apply paint and decals to sub-assemblies before completing final assembly. PAINT: Review photos shown on box tray for quidance.

NOTE SPECIFIC DECAL PLACEMENT **INSTRUCTIONS ON BOX** WHICH ARE TRAY **IMPORTANT** TO CONSIDER **DURING** ASSEMBLY!

DECAL APPLICATION:

- 1. Cut the desired decal from the sheet.
- 2. Dry fit the trimmed decal to become familiar with its correct placement.
- 3. Dip the decal in water for 20-30 seconds. For best results, mix one drop of common dish washing detergent per cup of lukewarm water.
- 4. Place the wet decal on paper towel and wait 30-60 seconds until the decal is movable on paper backing.
- 5. Wet the area of the model the decals will be applied to.
- 6. Hold the decal face up, in position on model and slide backing away from under it.
- 7. Once positioned correctly, absorb excess water with a paper towel.



Starting in the center of the decal, blot out air bubbles toward the edges with a soft damp cloth.

- 8. Troublesome air bubbles can be rubbed to the edge of the decal with a clean, soft paintbrush or simply puncture the decal with a sharp #11 blade. Air bubbles must be removed before the decal dries.
- 9. Let decals dry completely before handling or applying more decals next to or on top of previous work. It is best not to use heat to accelerate drying times as this may crack the decals, affect their adhesive or melt plastic parts!
- 10. After all decals are applied, a spray of dull coat is suggested to bury and protect the decals as well as hide surface imperfections and supply a lifelike final appearance to the model.


Space 1999 © ITC Entertainment Group Limited, 1975 and 2017, Licensed by ITV Ventures Limited. All rights reserved. MPC is a registered trademark of Round 2, LLC. ©2017 Round 2, LLC, South Bend, IN 46628 USA. Product and packaging designed in the USA. Made in China. All rights reserved.





Round 2, LLC 4073 Meghan Beeler Ct. South Bend, IN 46628





International Hobbycraft (UK) Ltd. 21 St. Thomas St. **Bristol BS1 6JS England**

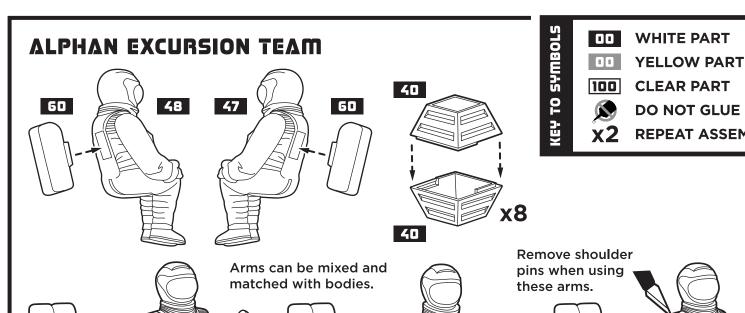


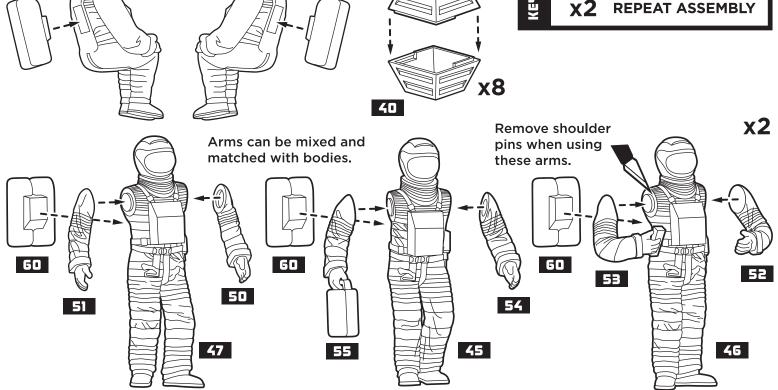

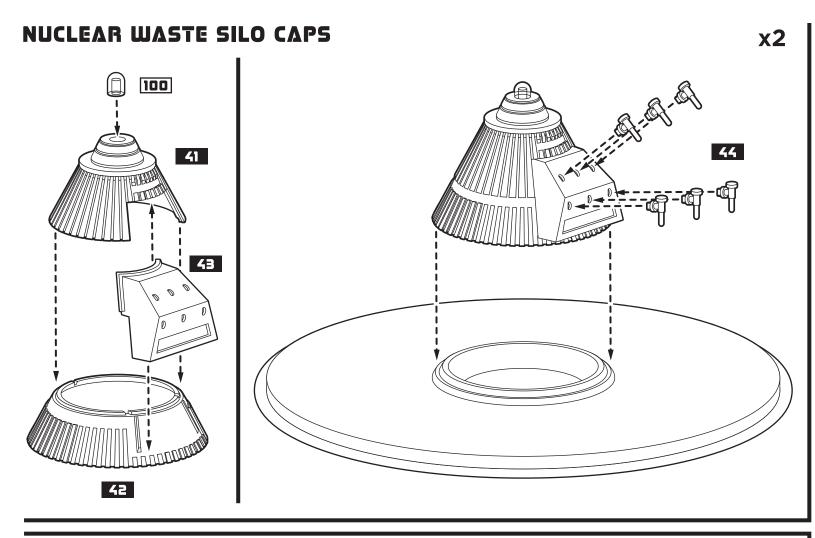

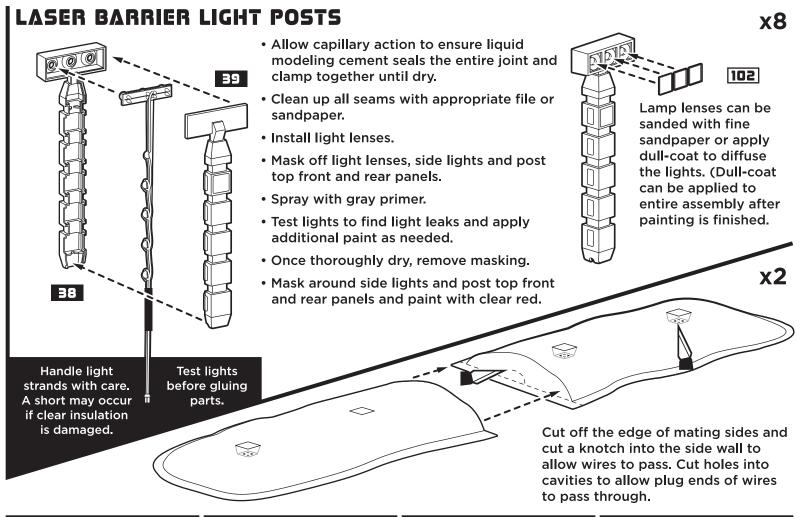

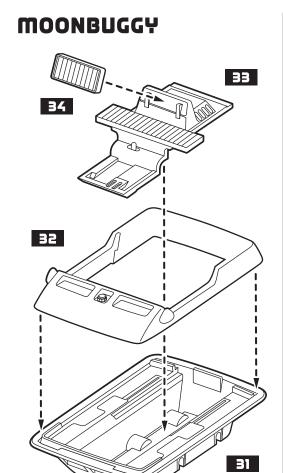

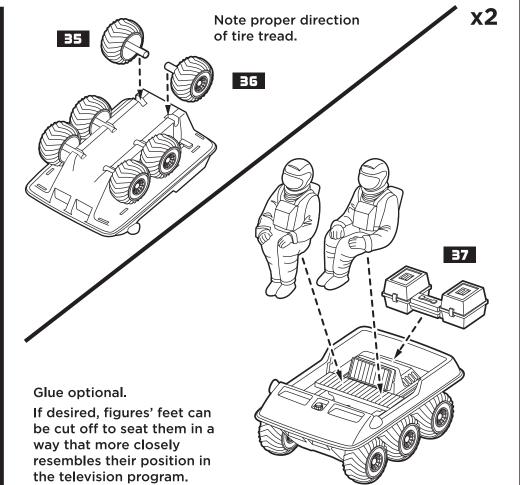



Sand mating edges for good adhesion. Then clamp the pieces together from the bottom.

Apply a bead of gap-filling glue into the seam.

NOTE: CA (Cyanoacrylate) glue is required to adhere to the PVC plastic used to create the base parts.

While glue is still wet, pour on a dry powder to disguise the seam. This technique will fill the seam easily without the need for puttying.

- Thread plug ends of lamp stand wires through the holes in the base activities.
- Glue lamp stands to base.
 Five-minute epoxy is suggested for best results.
- Once lamp stands are glued in place use the technique shown above to fill around bottom of lamp stand.
- Plug wire ends into receptacles on battery pack.
- Install two AA batteries (not included) in battery pack.
- Turn lights on then hide battery pack under base.

