
DON Snake PRUDHOMME MIDC

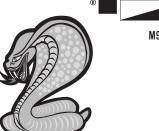

TOP FUEL DRAGSTER

IMPORTANT: READ THIS FIRST!

Before you begin building, look over the instructions carefully. Following the procedure given, test-fit parts together without cementing. This way you will be more familiar with the parts when it becomes

For removing small parts from the "runners", it is best to use a modelers knife, do not attempt to twist them off.

The highest quality styrene plastic goes into the making of each MPC® model. Only paint and cement made for styrene should be

used. Before joining parts, trim off excess plastic or "flash." Scrape plating from chromed parts where they are to be joined with other parts. Be careful not to get cement on exposed areas. To join parts, use cement sparingly. Apply cement to very small parts with a toothpick.

When painting your model, it is best to cement all non-chromed accessories to the body and paint the whole unit at one time.

You should have no trouble assembling your kit if the instructions are followed.

ASSEMBLY SEQUENCE

ASSEMBLY SEQUENCE (PLATED PART)



